

First Time Installation


- Please read instructions carefully before installation.
- Check the contents of kit. Contact your Prorack dealer if any parts appear to be missing or damaged.
- Clean your roof racks prior to fitting the Prorack High Lift Jack Holder.

Important Warning


- It is critical that all Prorack racks and accessories be properly and securely attached to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others.
- You are responsible for securing the racks and accessories to your car, checking the attachments prior to use, and periodically inspecting the products for adjustment, wear, and damage.
- If you do not understand all of the instructions and cautions, or if you have no mechanical experience and are not thoroughly familiar with the installation procedures, you should have the product installed by a professional installer such as a roof rack specialist.

Kit Contents


Item	Component	Qty
1	Roller	1
2	Brackets	2
3	T-Nuts	2
4	Set Screws M10x20	2
5	Split Pins	2

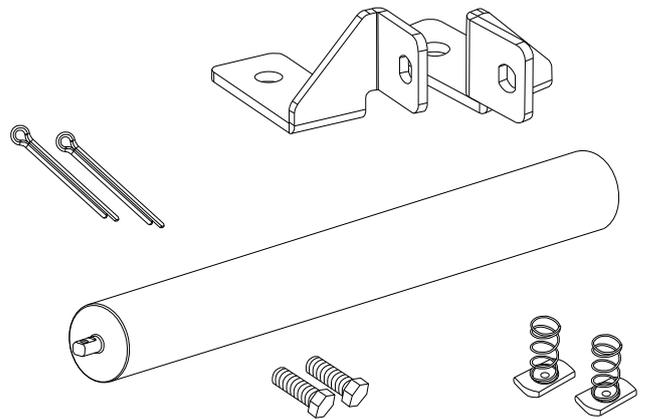


- 1** Fit left and right hand brackets onto roller shaft and position on roof bar

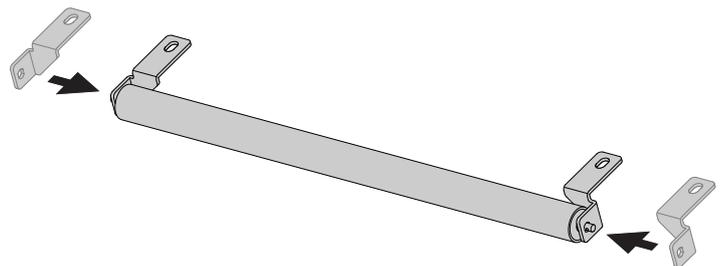

- 2** Attach using T-Nuts and Set Screws. Tighten Set Screws, ensuring there is a clearance between the roller and the bracket.

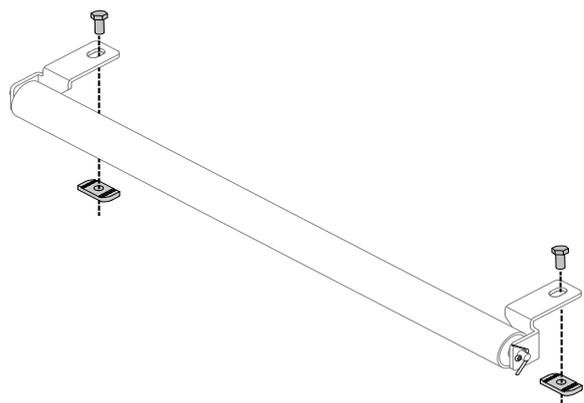

3 Fit the split pins to the roller axle once the roller has been assembled to the brackets.

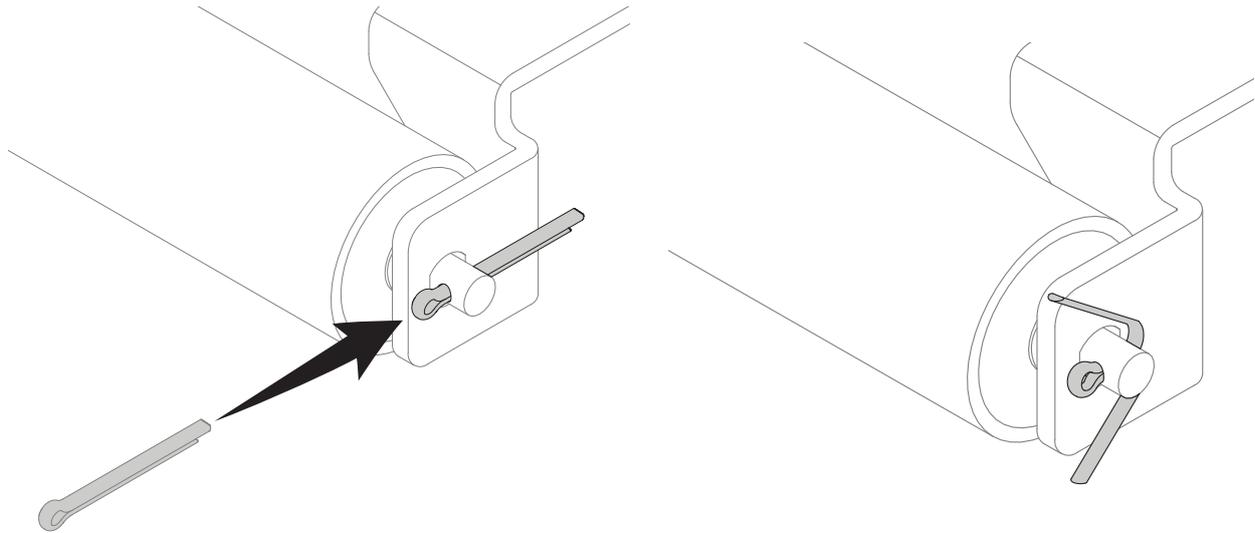

Prorack[®]
Ready for anything

Prorack
17 Hinkler Court, Brendale
QLD 4500, Australia

Freephone
AU: 1800 143 548
NZ: 0800 4776 722

www.prorack.com.au
www.prorack.co.nz

ALL CONTENT SUBJECT TO YAKIMA AUSTRALIA PTY LTD COPYRIGHT © 2017